

COVERAGE ACROSS NORTH AMERICA

Performance TruckGuard™ has you covered from coast to coast and across Canada.

YOU CHOOSE THE REPAIR FACILITY

Take your vehicle to the licensed Repair Facility of your choice. Performance TruckGuard™ will work directly with them to help you avoid any out-of-pocket expenses and get you back on the road quickly.

DEDUCTIBLE

All plans have a standard \$250 deductible, unless you choose the disappearing deductible option. If that option is selected, you pay \$0 deductible when you return to the selling dealer for your repairs.



For More Information, Call
888 964 1899
or visit our website
www.PerformanceTruckGuard.com



Guarding What Moves America

This brochure is intended to provide general information about the Performance TruckGuard™ Commercial Service contract. Please refer to your plan's terms and conditions, including a list of covered components and exclusions.



**ALL PLANS ARE
FULLY INSURED**



888-964-1899
headstartwarrantygroup.com

Headstart Warranty Group, LLC
14114 Dallas Parkway, Suite 600, Dallas, TX 75254
Fax: 800-811-2660

admin@headstartwarrantygroup.com



**COMMERCIAL
SERVICE CONTRACT
MEDIUM DUTY**

ENG_8-23

LEVELS OF COVERAGE



PREFERRED

Powertrain Coverage Details (Includes items 1-4)

1. ENGINE: All internal lubricated parts within the engine including camshaft, cam followers, camshaft bearings, connecting rods, connecting rod bearings, crankshaft, crankshaft bearings, cylinder head gasket, exhaust valves, intake valves, lifters, main bearings, oil cooler and housing; oil pump, pump gears, pump housing, pump pickup screen, pump pickup tube, pump pressure relief springs and valves; pistons, piston rings, rocker arms, rocker arm shafts, timing gears, valve guides, valve retainers, valve springs, valve stem seals, wrist pins; required seals, gaskets and fluids needed to complete a covered repair; The engine block, cylinder head(s) and cylinder liners are only covered in conjunction with a covered Mechanical Part Failure.

2. TRANSMISSION COMPONENTS: All internal lubricated parts of the manual or automatic transmissions, including: torque converter, oil pump, valve body, governor, bands, drums, planetaries, sun gear, sprag(s), shaft(s), bearings and related bushings, shift rail, forks and synchronizers. The transmission case is only covered in conjunction with a failed covered part.

3. REAR AXLE COMPONENTS: All internally lubricated parts including: output shaft, bearings, bushings, gear sets, axle and bearings, carrier, ring and pinion gears, bearings, bushings, axle shaft. The drive axle housing is only covered if damaged by a failed covered part.

4. TRANSFER CASE COMPONENTS: All internally lubricated parts of the transfer case, bearings, bushings, chains, gears, sleeves and sprockets. (Exclusions are clutch, pressure plate, throw-out bearing, linkage, cables, shifter, electronic switches, solenoids and clutch slave cylinders.)

PREFERRED PLUS

Coverage Details (Includes items 1 & 2)

5. AIR CONDITIONING COMPONENTS: Accumulator, AC compressor, AC-clutch, condenser, receiver dryer, evaporator, and expansion valve. Evacuation/ Recharge is eligible only when a failed component is covered. (Excludes any retro fitting to any updated ac system or updated component).

6. HEATING & COOLING COMPONENTS: Radiator, water pump, thermostat, electric radiator fan, fan and clutch, coolant recovery container. (Exclusions are belts, hoses, heater core, blower motors and electric switches.)

ELITE

Coverage Details (Includes items 1-12)

7. BRAKING COMPONENTS: All internally lubricated parts of the hydraulic system, including master cylinder, vacuum power assist booster and valve, disc brake calipers, wheel cylinders, steel brake lines and hoses. (Exclusions are linings, rotors, pads, drums, hardware and any component failure due to fluid contamination and ABS.)

8. ELECTRICAL COMPONENTS: Alternator, electric horn, front wiper motor, rear defroster switch, starter motor, starter drive assembly, starter solenoid, and voltage regulator.

9. STEERING COMPONENTS: Power Steering pump, rack and pinion, steering gear box.

10. SUSPENSION COMPONENTS: Upper and lower control arms, upper and lower ball joints, leaf and coil springs (only if broken), wheel bearings and spindles.

11. TURBO CHARGER/FUEL COMPONENTS: OEM installed equipment only. All internally lubricated parts, housing, wastegate, vanes, shafts and bearings. Fuel injectors, fuel injector cups and fuel pump.

12. SEALS & GASKETS COMPONENTS: Cylinder head gaskets and intake manifold gaskets are covered. All other seals and gaskets are covered for listed parts.

PREMIER (DIESEL ONLY)

Coverage Details (Includes items 1-13)

13. EXHAUST AFTERTREATMENT SYSTEM (E.A.S.) COVERAGE: This Coverage includes the following components; back pressure control valve (BPV), BPV regen valve, BPV control cylinder; Diesel exhaust fluid (DEF) pump, DEF doser injector, DEF level sensor, DEF temp sensor, DEF heater control valve, DEF heating element; Diesel Oxidation Catalyst (DOC) catalyst only DOC temperature sensors pre and post; Diesel Particulate Filter (DPF) filter assembly, DPF hydrocarbon doser injector, DPF air / fuel manifold, DPF back pressure sensor, DPF fuel pressure sensor, Exhaust Gas Recirculation (EGR) valve assembly one or two, EGR cooler assembly, Electronic Control Modules (ECU) after treatment ECM, ECU dosing ECM; Select Catalyst Reduction (SCR) catalyst, SCR temperature sensors pre and post; Oxides of Nitrogen (NOx) sensor.

BENEFITS

- Expanded Eligibility
- Simplified Coverage Levels
- Coverage for Turbos, Injectors, and Exhaust After treatment
- Towing on All Contracts
- Progressive Damage Coverage
- Rental Coverage Option
- Disappearing Deductible Option
- Cancellable / Transferrable
- FINANCING AVAILABLE



PICK THE PLAN THAT'S RIGHT FOR YOU!

See Service Contract Agreement for Coverage Details.